



FIG. 2 Heated Rear Window Wiring Diagram

REMOVAL AND INSTALLATION CONTROL ASSEMBLY

Remove instrument panel center finish plate.
Remove the two screws retaining the heated rear window control assembly to the instrument panel.
Disconnect the electrical connector from the control assembly.

HEATED REAR WINDOW

Disconnect the wire leads at each end of the window.
Remove the window.

